

Warranty

1. Under normal conditions of proper use and maintenance of the product, the warranty period of the product is 1 year.
2. This guarantee will only be valid if the appliance is used in the country in which it was sold.
3. Expendable parts, such as filter cage, cleaning brushes, etc., are not under the terms of the warranty.
4. The following conditions are not covered by the warranty service:
 - Failure to show a valid warranty card, or the information on the warranty card is inconsistent with the actual product.
 - Appliances with alterations or repairs carried out by parties other than HUSH or its authorised agents will not be covered by the warranty service.
 - Proof of purchase is not included with warranty card.
 - Failure to follow the instructions in the instruction manual to operate and maintain the appliance, causing it to malfunction or damage by dropping the appliance, immersing the appliance in water and physical alterations of any kind will void the warranty service.
 - Product damage due to transportation or improper storage.
 - Normal wear and tear (e.g. fuse etc.)
 - Use of the machine for anything other than as a hair dryer.
5. This warranty card is the only warranty certificate, please store it properly along with your proof of purchase.
6. The company will charge a maintenance fee for products without a warranty card or beyond the warranty period.
7. Please send the appliance in need of repair or warranty directly to the designated HUSH domestic service center for repair, maintenance, or replacement.

Eagle Fortress International Limited


www.hushhongkong.com

 @hush_professional

HUSH
PROFESSIONAL

HU390

 The Professional Hair Dryer

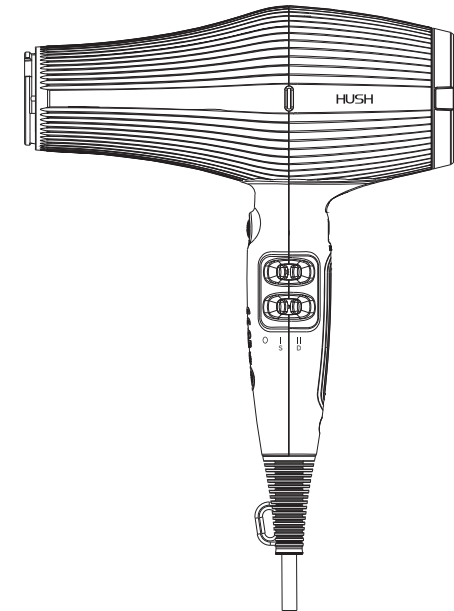

USER MANUAL

Important Safety Instructions

 
Thank you for choosing to buy HU390 hairdryer. Before using this appliance, please read all instructions and cautions in this manual.

Warning


1. Do not stretch the cable, place the cable under strain or unplug by pulling on the cable. The use of an extension cable is not recommended. If the cable is damaged, it must be replaced or repaired by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
2. Keep the cable away from heated surfaces and do not wrap the cable around this appliance.
3. Unplug the appliance from the power outlet when it is not in use. Do not handle any part of the plug or appliance with wet hands.
4. Do not use this appliance near bathtubs, showers, basins or other vessels containing water. Do not use the appliance with wet hands, in a damp environment or on wet surfaces.
5. Do not immerse the appliance in water or other liquids.
6. If the appliance is not working as it should, if it has been dropped, damaged, left outdoors, or dropped into water, please do not use and contact HUSH helpline.
7. Contact the HUSH helpline when a repair is required. Do not disassemble the appliance as incorrect reassembly may result in an electric shock or fire.
8. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is turned off. For additional protection, it is recommended that a Residual Current Device (RCD), with a residual operating current not exceeding 30 mA is installed in the electrical circuit supplying the bathroom.
9. This appliance cannot be used by children. It can be used by persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge only if they have been given supervision or instruction by a responsible person concerning use of the appliance in a safe way and understand the hazards involved.
10. To clean the appliance surface, unplug the appliance. Do not use aggressive products containing phenyl phenol.
11. Do not use the appliance for any other purpose than drying hair.

1


Overview

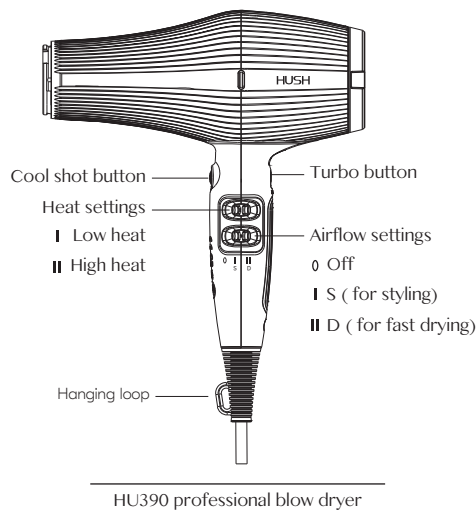

HU390 professional blow dryer

 

Styling concentrator

 

Smoothing nozzle

Product Specifications

MODEL	SPECIFICATION		
HU390	220-240V	50/60Hz	2100-2400W
	120-125V	60Hz	1800-1875W

2

Instructions

Make sure that your hands are dry before connecting the appliance to the mains.

Connect the appliance and push the airflow setting from "0" to "1". The indicator light will turn on.

Heat settings

Push the heat setting to select the heat level that suits your hair type and styling preference.

Airflow settings

Push the airflow setting to select the airflow level. Set the dryer to "1" low speed setting for styling precision drying or "II" high speed for fast drying.

Turbo button

Press turbo button to speed up turbo by 2000 rpm, press turbo button again to go back.

Graphene heating technology

Enhanced with the excellent heat conductor Graphene, this powerful dryer cuts down styling time and gives smooth, shiny results with less breakage.

Advanced negative ions technology

Control frizz for a soft style and provide negatively charged ions to neutralize the effect.

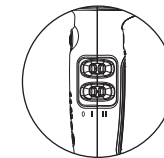 


Fig.1

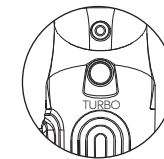 


Fig.2

3